



# USER MANUAL

## DS30B DRUM AMPLIFIER

SOUNDKING ELECTRONICS&SOUND CO., LTD.

WWW.SOUNDKING.COM

All rights reserved to SOUNDKING.

No part of this manual may be reproduced, translated or photocopied  
by any means for any purpose, without the written permission of SOUNDKING.  
The information involved in this manual is subject to change without notice.





**GD201808375**

**070403651**

## IMPORTANT SAFETY SYMBOLS



 The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or death.

 The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety the component specified in that documentation for safety reasons.

 Protective grounding terminal

 Alternating current/voltage


 Hazardous live terminal

ON: Denotes the apparatus is turned on.

OFF: Denotes the apparatus is turned off.

**WARNING:** Describes precautions that should be observed to prevent the danger of injury or death to the operator.

**CAUTION:** Describes precautions that should be observed to prevent danger of the apparatus.

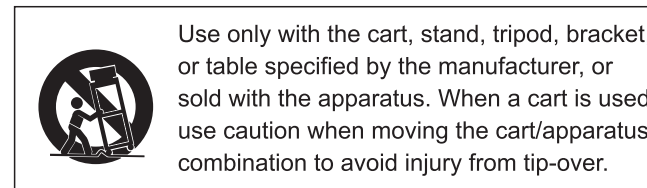

## IMPORTANT SAFETY INSTRUCTIONS


- Read these instructions.
- Heed all warning.
- Water & Moisture
- Heat
- Keep these instructions.
- Follow all instructions.

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchen sink or a swimming pool, etc.

·Heat

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

## DS30B TOP PANEL

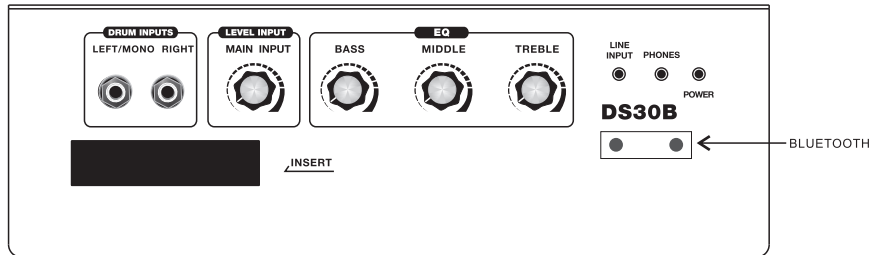

### DRUM INPUTS:

These are 1/4" input jacks (left and right).when using a mono signal, plug into the left/mono jack.

### MAIN INPUT:

Use this control to adjust DRUM INPUTS level.

### BASS:

Use this control to adjust the low frequency level of signal.

### MIDDLE:

Use this control to adjust the middle frequency level of signal.

### TREBLE:

Use this control to adjust the high frequency level of signal.

### LINE INPUT:

This is to connect with MP3 or any audio source for playing along as accompany.


### PHONES:

This is to connect with headphones for silent practice.

### POWER:

Power "on" Indicator.

## DS30B REAR PANEL

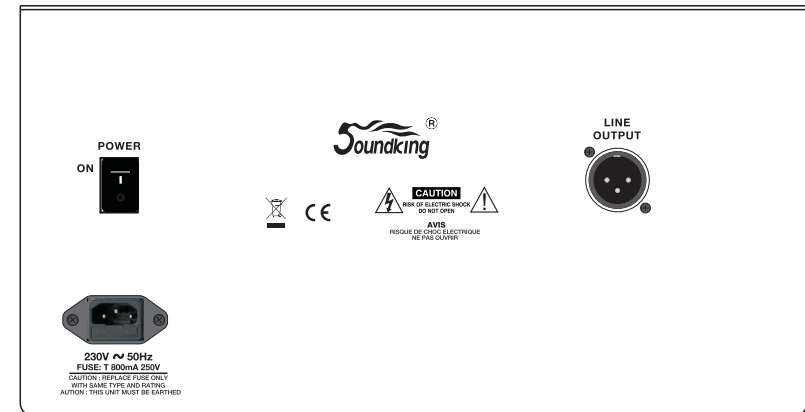

### POWER:

Use this switch to turn the amplifier on and off.

### LINE OUTPUT:

Line signals output to connect another AMP.

## SPECIFICATIONS

- \* Power: 30W/8 Ohm
- \* Input impedance: 10K Ohms
- \* Input sensitivity : -12dBV
- \* Speaker: 10"/ 8ohm coaxial
- \* Consumption power: 80W
- \* Dimension(HxWxD): 445x415x395mm
- \* Weight : 12kg